

Provisioning in COS BE

Service activation with
auto-provisioning
step by step



Auto-provisioning flow

The Auto provisioning flow consists of three main steps that will be described in detail in the following slides.

Step 1

The ONT is created in
COS BE

Step 2

The ONT is connected
to an Object (address)
in COS BE


Step 3

A Service is created on
the ONT by the NMS



Auto-provisioning flow (1)

ONT auto-discovery supported
ONT powered up at installation ⚡

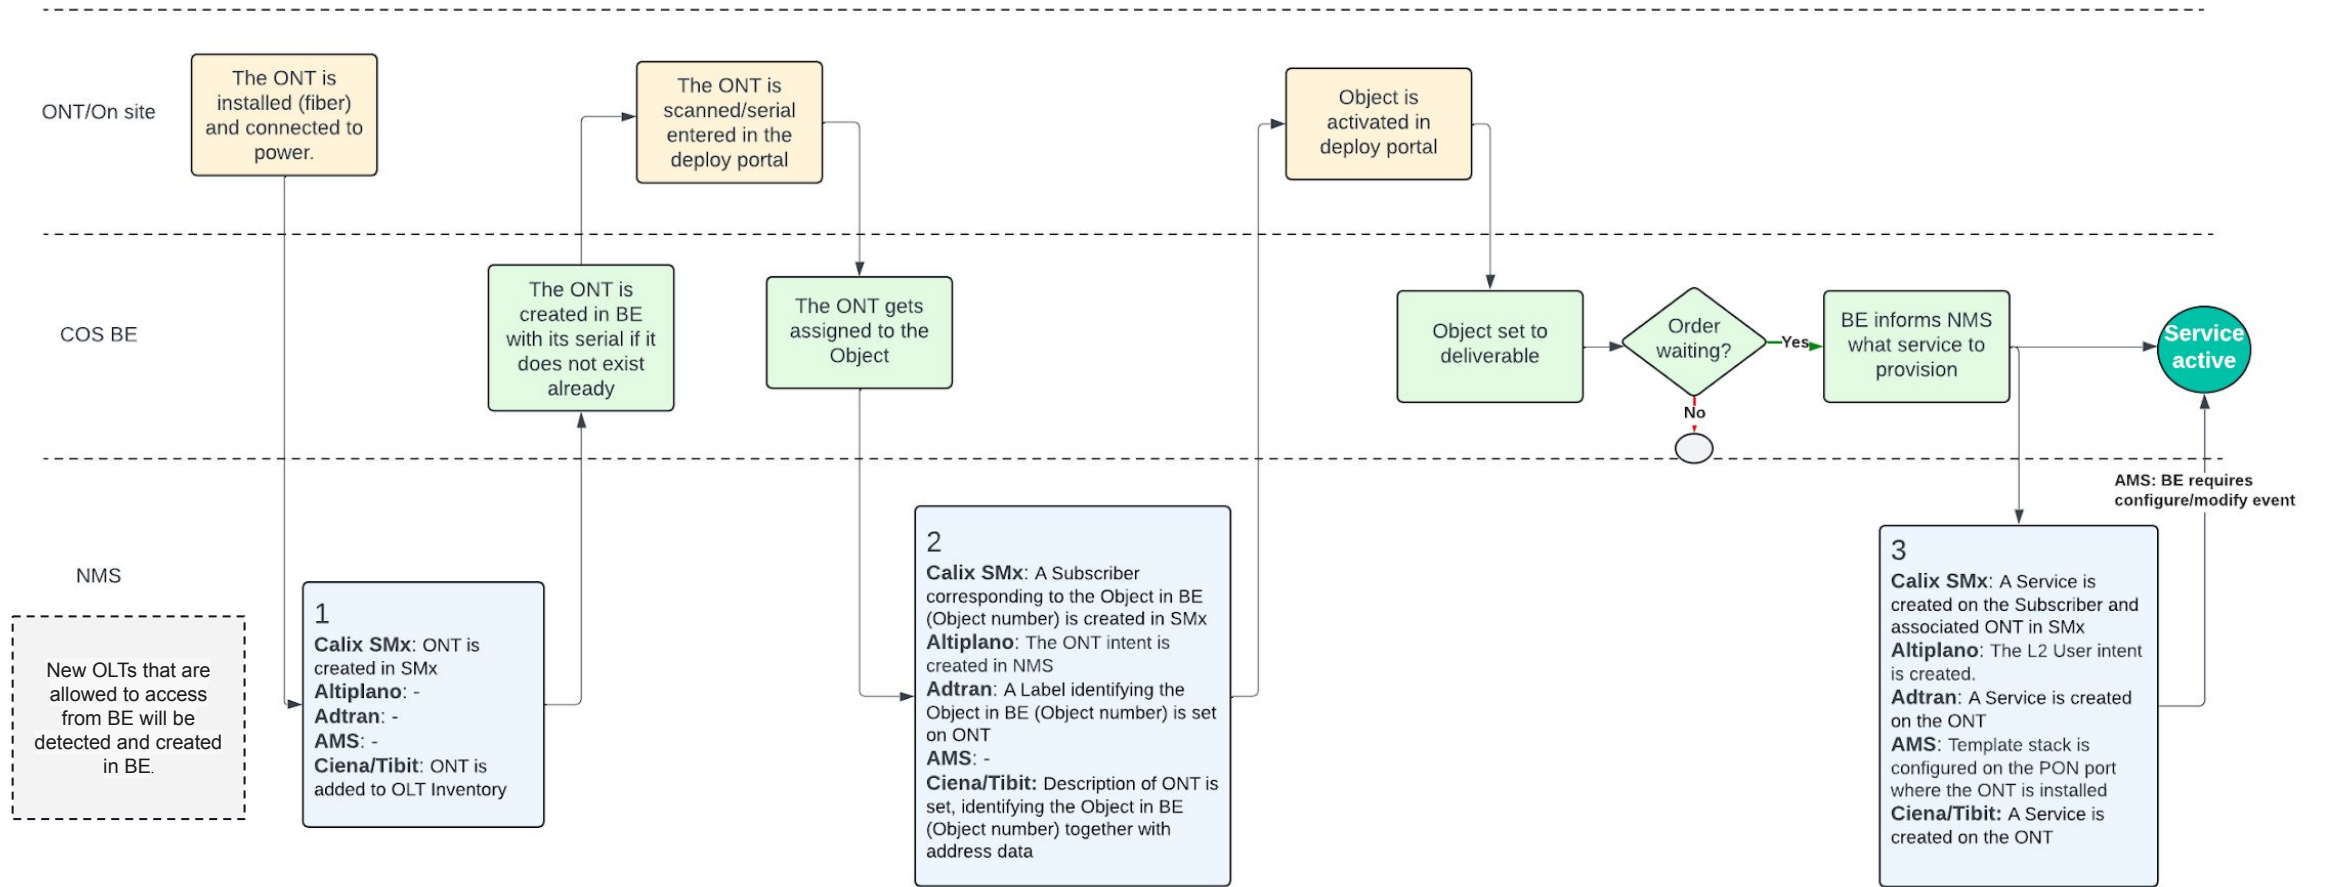


*(AMS+Altiplano Lightspan)



Auto-provisioning flow (2)

ONT auto-discovery supported

ONT NOT powered up at installation/before scanning

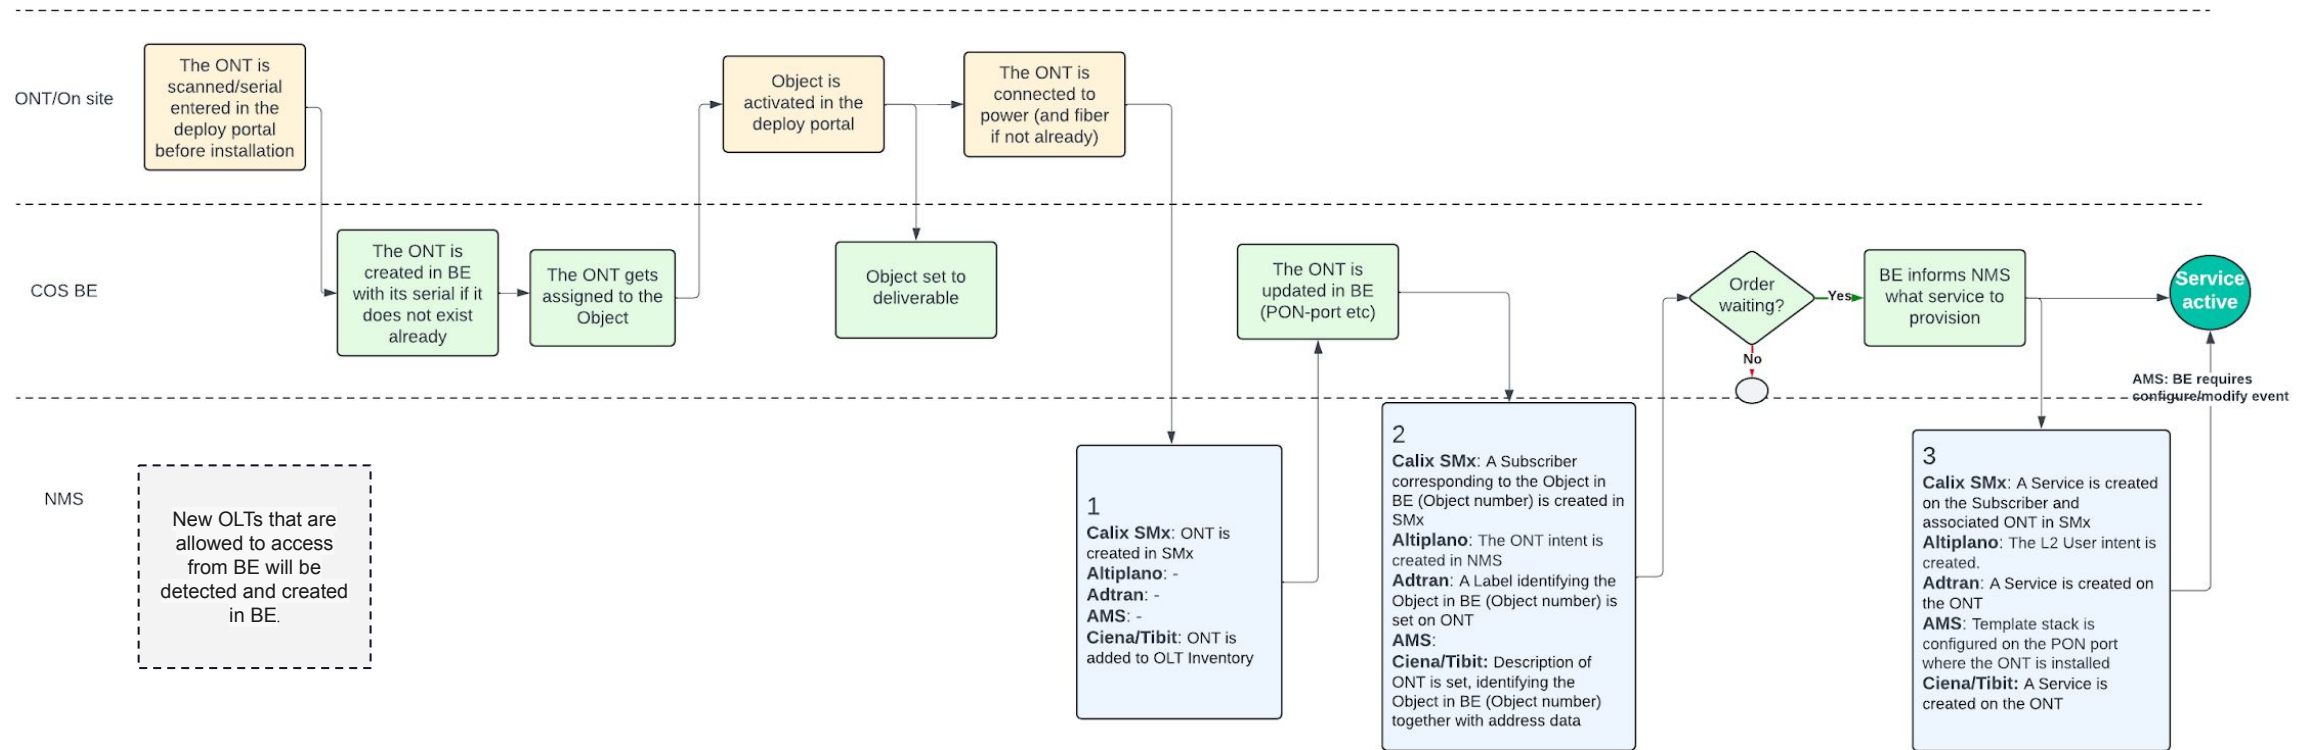


*(AMS+Altiplano Lightspan)



Auto-provisioning flow (3)

ONT auto-discovery NOT supported


ONT powered up at installation

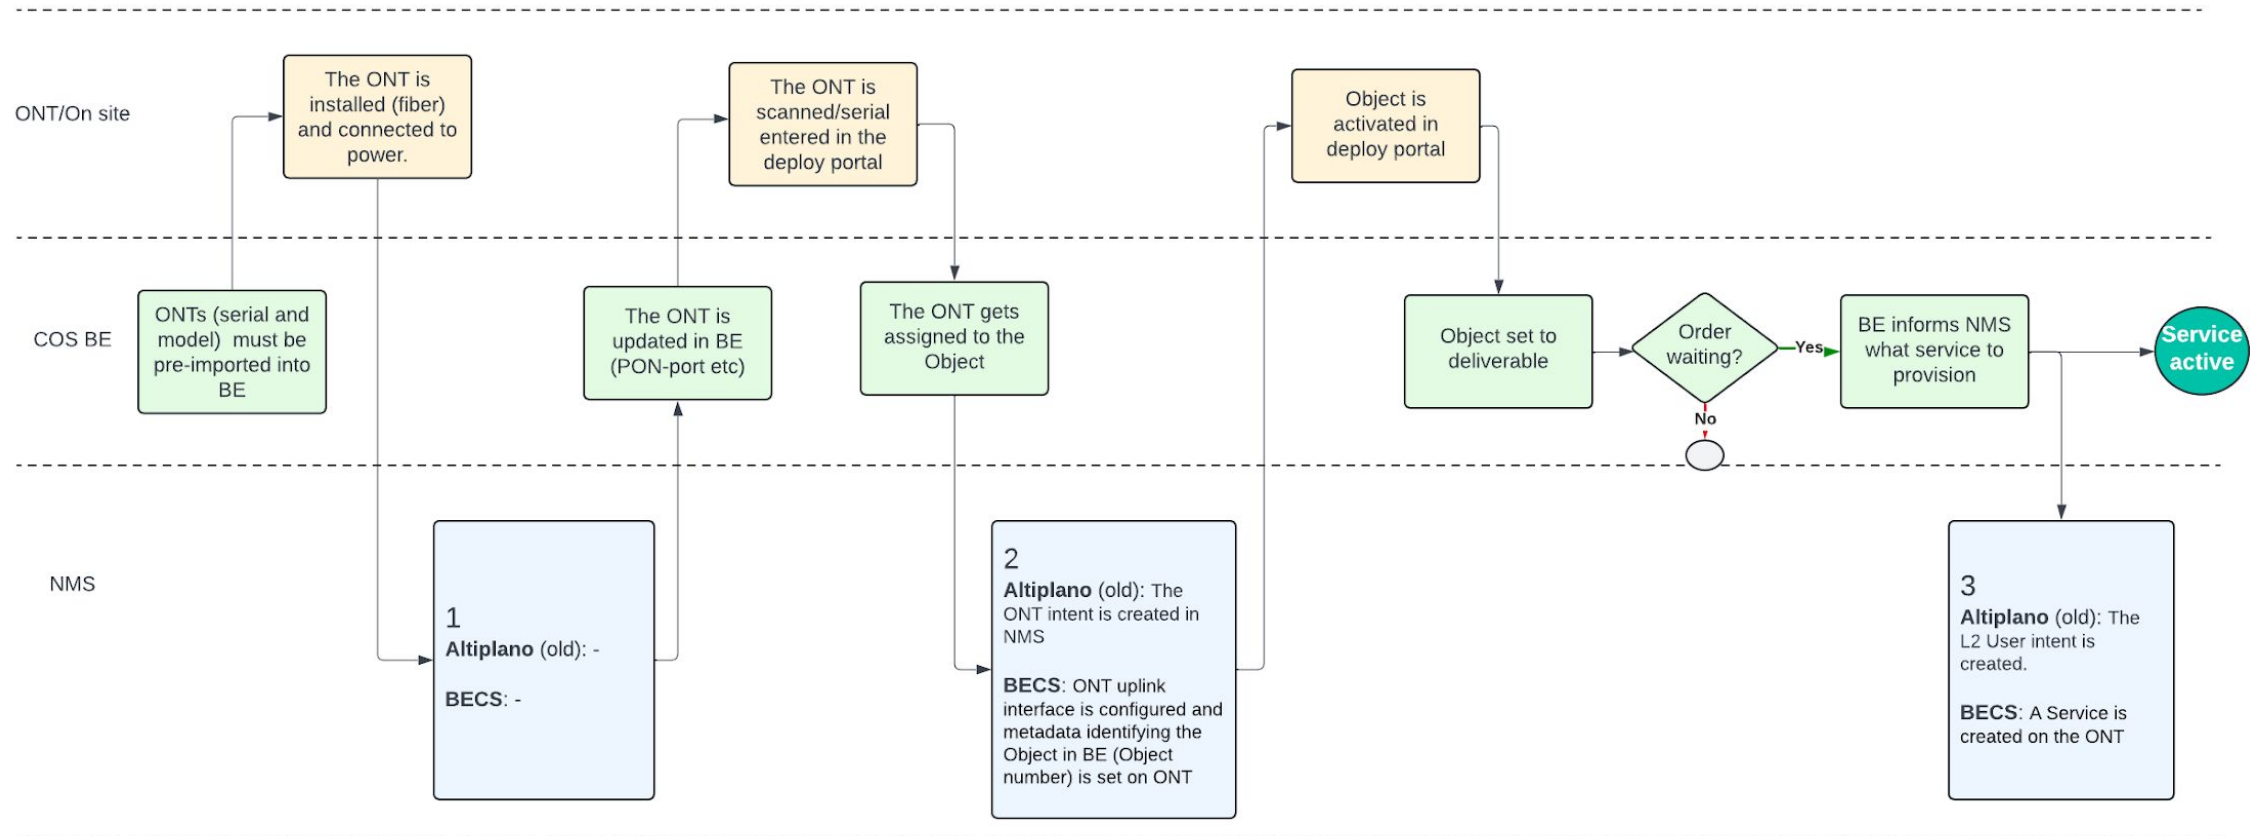

All types
of NMS



Auto-provisioning in areas with poor or no cell coverage

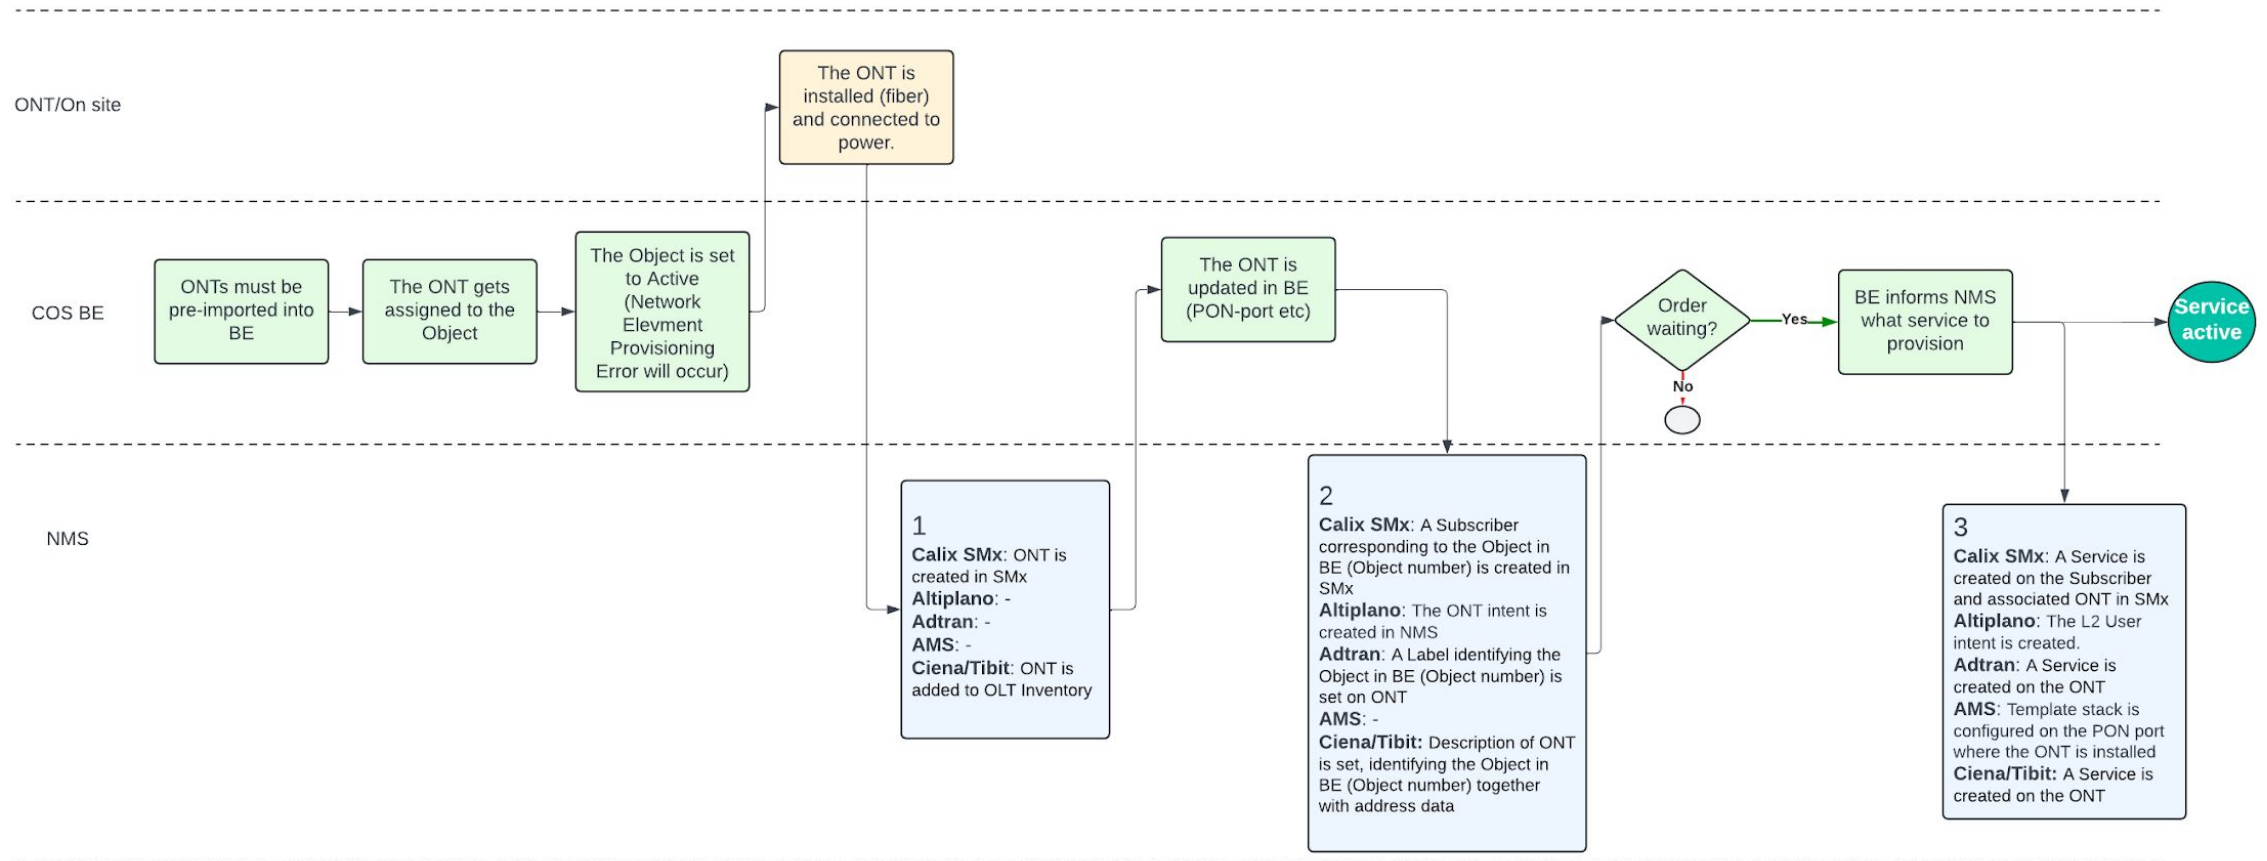

All types
of NMS



Manual Provisioning

